



Lexan® Hardcoated Polycarbonate
VStream® Windscreen
N20804, Low Dark Tint
N20805, Low Light Tint
N20806, Mid Clear
For KTM 1290 Super Duke GT

Thank you for purchasing a National Cycle product. Read these instructions carefully and thoroughly before beginning work. Dealers, if installing this windscreen for a customer, please give them this manual. It contains information needed to properly maintain and use this product.



Attention:

Special notes and cautionary measures which can prevent damage to the accessory or motorcycle.



Note:

Tips for facilitation of operation, control and adjustment, as well as maintenance work.

CONTENTS OF KIT

Item	Description	Part No.	Qty.	Notes and Tools
1	VStream® Windscreen		1	All Stock Hardware Will Be Re-used
BAG#1283				
2	Standoff, Long	34-350754-000	2	Use In Upper Holes, Box Wrench
3	Standoff, Short	34-350753-000	2	Use In Lower Holes, Box Wrench
4	Washer, Poron	44-447635-000	4	



PREPARATION

1. Place motorcycle securely on its side stand.
2. Remove the upper and lower screws holding the stock windscreen. **(T30 Torx Wrench)**

Figure 1



Stock screws will be re-used.

Figure 1

National Cycle, Inc. PO Box 158 Maywood, IL 60153-0158 USA

708-343-0400 / Fax: 708-343-0625 / www.nationalcycle.com / e-mail: info@nationalcycle.com

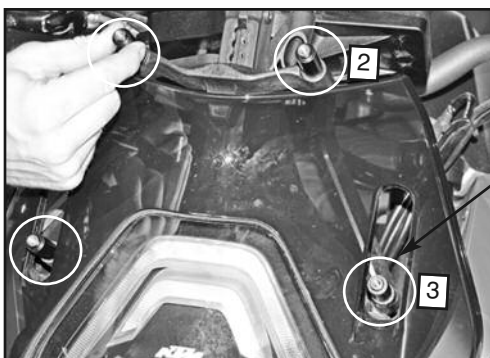


Figure 2

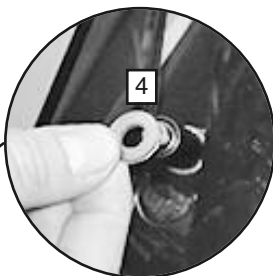


Figure 2, Inset

INSTALLATION

Install Upper and Lower Standoffs

1. Thread the Upper (2) and Lower (3) Standoffs into the Stock Bracket Arm.

 **Protect the Standoffs with a piece of painters tape or electrical tape, to keep the paint from being chipped during installation.**

2. Firmly tighten the Standoffs, taking care not to over-tighten. **(1/2" Box Wrench) Figure 2**

3. Remove protective liner from a Poron Washer (4). Install 1 washer (4) to each Stand-off. **Figure 2 Inset**

Install Windscreen

3. Use the 4, OEM M5 x 12 Screws to install the VStream Windscreen to the Standoffs. Tighten screws firmly. **(T30 Torx Wrench) Figure 3**



Figure 3



Adjusting Windshield Height

 **Adjust windshield height using the windshield carrier bracket. Use two hands to firmly grasp the carrier bracket, adjust Windshield.**

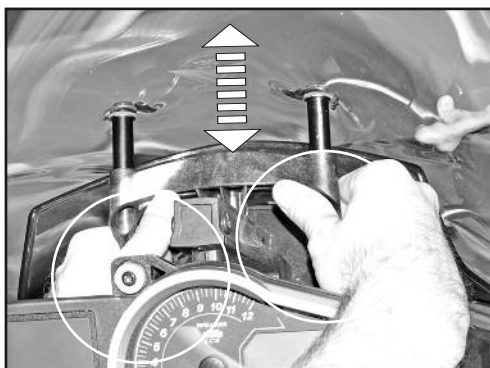


Figure 4



Enjoy your new VStream® Windshield

CLEANING AND MAINTENANCE To clean the screen, wash with a clean soft cloth, plenty of warm water and if necessary, a non-abrasive soap such as dishwashing liquid. Flannel or soft chamois make good cleaning cloths. **Paint, glue residue or grease removal:** Moisten cotton with naphtha or turpentine followed by a wash as above. National Cycle **Shield Wash™** (N1401-01) makes a good daily cleaner and comes with a handy travel size bottle. Shield Wash is safe for all windshields and helmet visors.

Do not clean polycarbonate in hot sun or high temperatures. Do not clean the screen with glass cleaners.

Do not allow brake fluid, alcohol, or strong solvents to contact the screen.

RAIN REPELLENT Do not use rain protective products made for glass. We recommend National Cycle's **RainZip®** (N1410-01) to keep your windscreen clear in rainy weather.

WARNING

Fahren Sie Ihr Motorrad niemals mit losen Zubehörteilen. Überprüfen Sie die Halterungen regelmäßig auf festen Sitz.

Die heutigen Motorräder sind mit einer ausreichenden Rahmensteifigkeit gebaut, um den moderaten Belastungen standzuhalten, die durch die absehbare Hinzufügung eines oder mehrerer Zubehörteile auf sie ausgeübt werden. Wenn ein oder mehrere Zubehörteile die Stabilität Ihres Motorrads beeinträchtigen, entfernen Sie sofort das / die Zubehörteil(e). Nehmen Sie kein Motorrad in Betrieb, das unsichere Fahreigenschaften aufweist.

Lassen Sie das Problem von erfahrenem Servicepersonal beheben, bevor Sie mit installiertem Zubehör fahren. Bei weiteren Fragen zu Handhabungsproblemen im Zusammenhang mit einem oder mehreren Zubehörteilen wenden Sie sich bitte an Ihren Händler, Motorradhersteller oder Zubehörhersteller.

Sonnenlicht, das von der inneren Krümmung der Windschutzscheibe reflektiert wird, kann zu bestimmten Tageszeiten zu einem extremen Wärmestau auf den Instrumenten des Motorrads führen und diese möglicherweise sogar zum Schmelzen bringen. Gehen Sie beim Parken vorsichtig vor, um dies zu vermeiden. Stellen Sie Ihr Motorrad in Richtung Sonne ab oder platzieren Sie einen undurchsichtigen Gegenstand über diesem Bereich.

National Cycle, Inc. PO Box 158 Maywood, IL 60153-0158 USA

708-343-0400 / Fax: 708-343-0625 / www.nationalcycle.com / e-mail: info@nationalcycle.com